



Classroom Audio Use Instructions

Brand: Light Speed



TEACHER/STUDENT Talk:

The lapel (over the head) mic is for the teacher. The switch on the side for A and B refers to the volume controls on the control box. A is the typical setting for the teacher mic. The student mic is on B. If the teacher is on A and the student on B they both have access to the system and talk together through the system. If the teacher switches to B then the teacher audio takes precedence over the student and will block the student audio.



AUDIO CDs, DVDs, and VHS Tapes:

CDs/DVDs/VHS all work through the player under the TV and are adjustable using the CD/DVD/VCR knob.

- CDs (just audio) can play through the DVD player on the mounted VCR/DVD. You do not need the separate CD player.
- To get DVDs and VHS tapes to display on the TV you need to:
 - a. Power on the TV
 - b. Use the TV remote to adjust the input.

TV/CABLE:

The TV plays through the audio system. Power the TV on and instead of using the remote or TV volume control use the Audio System control labeled TV/Cable

COMPUTER/MP3 Player:

Computer, MP3, and other audio can also be played through the sound system (this is good for United Streaming clips on your computer). Use the mini-audio cable and plug it into the headphone jack on your device (computer).

- Anything plugged into the mini-audio end is controlled through the Computer/MP3 knob.

